

USE AND CARE GUIDE

LOW VOLTAGE LANDSCAPE LIGHTING



WARNING: This luminaire is intended for installation in accordance with local codes and the National Electric Code (NEC). Failure to adhere to these codes and instructions may result in serious injury, property damage and void the warranty. When using multiple fixtures, do not exceed the total wattage load as specified by the transformer rating. This product is designed for above ground installation only. Keep these installation instructions for future use.



CAUTION: Install the fixtures no less than ten feet (3.05m) from pools, spas, or fountains to minimize risk of electric shock. Always use UL listed wire and wire connectors for connections.



CAUTION: Make sure all connectors are tightly secured to prevent water entry.



 
CAUTION: Only for use with low voltage landscape lighting power units with a maximum output rating of 12 volts, 25A per secondary.



CAUTION: Reliable operating temperature is -4°F to 113°F (-20°C to 45°C). No Bulbs to Replace.

Account for small parts and discard packing material, as these may be hazardous to children.

TOOLS REQUIRED (not supplied)




Wire Strippers



Safety Goggles


HARDWARE CONTENTS Note: Hardware not shown actual size.

 FIXTURE PARTS

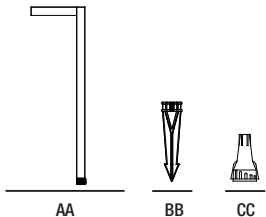


Part	Description	Quantity
AA	Fixture Body	1
BB	8" Ground Stake	1
CC	Waterproof Connectors	2

 REPLACEMENT GASKETS AND SCREWS

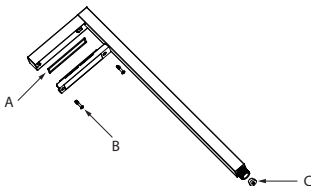

Part	Description	Quantity
A	Gasket	1
B	Mounting Screws	2
C	Gasket	1

 Remove the fixture and the mounting package from the box and make sure that no parts are missing by referencing the illustrations on the installation instructions.

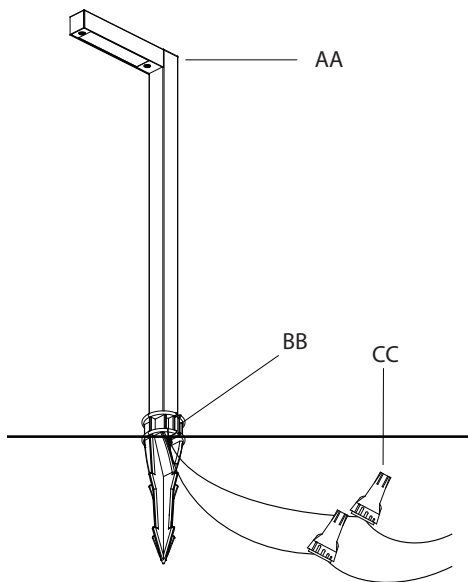

1. Prior to installing or servicing this product, disconnect the transformer from the main power supply.
2. Insert the pigtail wires from the bottom of the fixture (AA) through the hole and slot located on the head of the mounting stake (BB).
3. Screw the fixture (AA) into the mounting stake (BB) hole.
4. Place the fixture/stake in the desired location. Insert the stake (BB) into the ground in the desired location until the bottom of the stake (BB) head rests on the ground surface.
5. Strip the two fixture (AA) pigtail wires. Attach the two fixture leads to the two main supply cable leads using the two provided waterproof connectors (CC). Please note that the fixture wiring should be buried no deeper than six inches to ensure connectivity to the main Supply Cable.
6. Reconnect the transformer to the main power supply. Turn on the power to the fixture and verify proper position and operation.

Path lights have an operating voltage range of 10-15 volts AC. Operating path lights with voltage greater than 15V may damage the internal components of the LED and voids the manufacturer warranty. Path lights maintain light output, full color, and instant start capabilities to temperatures down to -20 degrees Celsius. Path lights will operate at the desired light output with voltage as low as 10V and as high as 15V, providing balanced light output from the fixture located closest to the transformer to the fixture located furthest from the transformer.

CARE AND MAINTENANCE

To clean, turn off and wipe with a damp, non-abrasive cloth.